





EUROLINE

W I N D O W S

*The Art and Practice
of Fenestration*

**LIFT & SLIDE ASSEMBLY
INSTRUCTIONS**


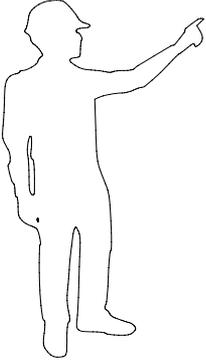


TOOLS:


Drill/Screw gun
Clamp (optional)

MATERIAL:


4.5" Screws supplied by
EuroLine Windows

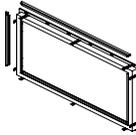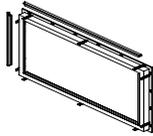

Minimum 2 people required for installations

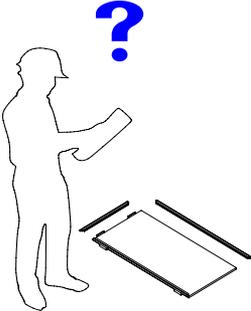

EUROLINE
WINDOWS

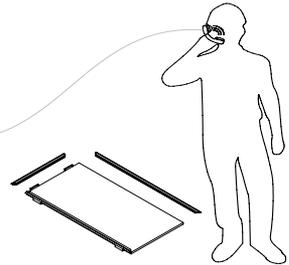


Contact Euroline Windows if feeling unsure

ASSEMBLY INSTRUCTIONS

1. Identify the side of the profiles that will face the inside of the house (interior side)




A. All profiles have yellow stickers on the interior side

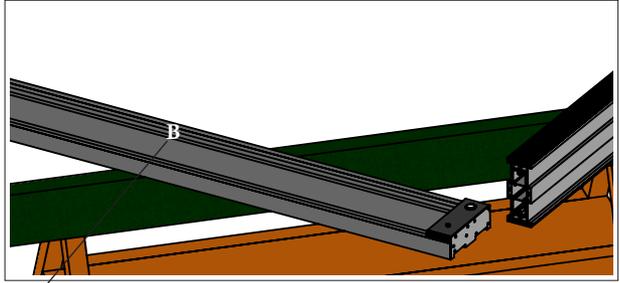


B. Sill doesn't have a sticker. It's tallest side is the interior side

2. Lay profiles flat on a protective surface, the interior side facing down

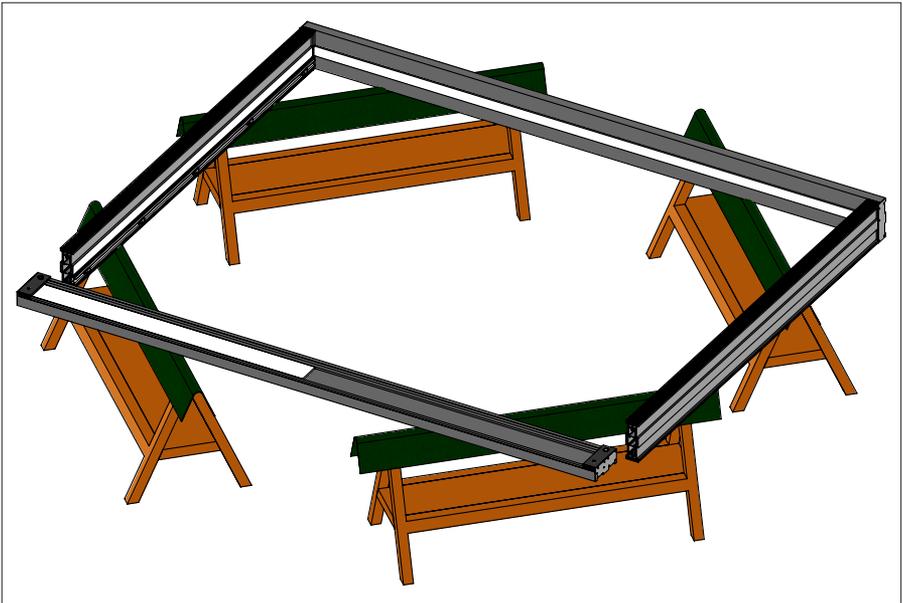


3. Push the sill into the side profiles

Install 4.5" screws provided, two per connection on the bottom (sill) left & right corners through the pre-drilled holes.

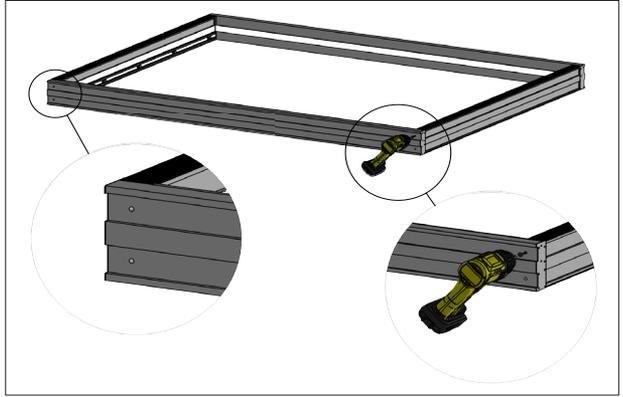


4. Push the top profile into the side profiles as shown below

Install 4.5" screws provided, two per connection on the top left & right corners through the pre-drilled holes.

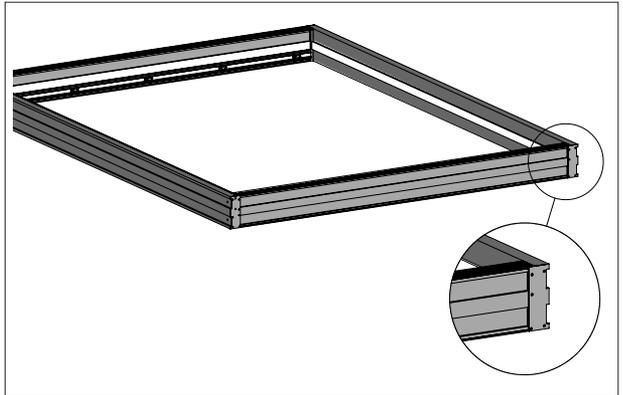


5. Lift the frame into a horizontal position

We recommend clamping the door to a rigid body for easier installation.

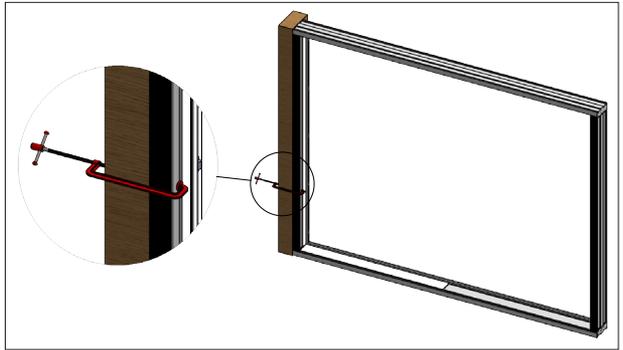

6. Install the fixed sash


Identify where the fixed sash will go.

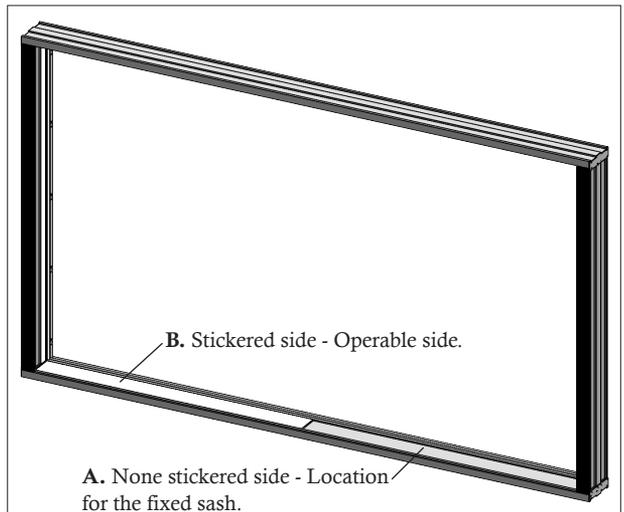

7. Place the fixed sash into the opening

Fixed sash is the sash without handle.

We recommend clamping the sash for easy installation.

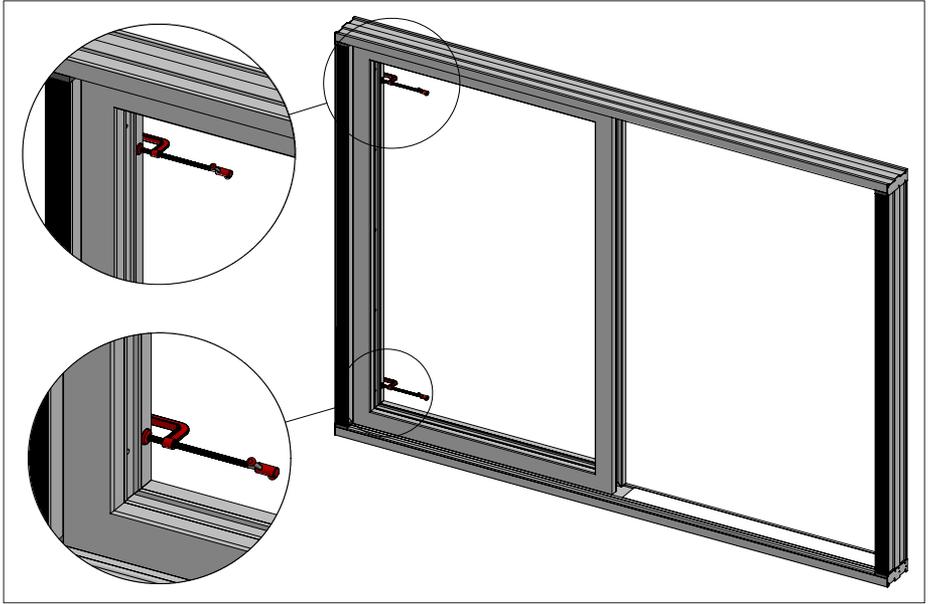

8. Screw in 4.5" screws provided into the pre-drilled locating holes to finish installing the fixed sash


All holes along the bottom, side, and top are pre-drilled.

IMPORTANT:

Two to four screws will go on the bottom depending on the sash size.

Tip: check for pre-drilled holes under glazing shims.

Depending on the sash size, around three screws will go on the side and three on the top.

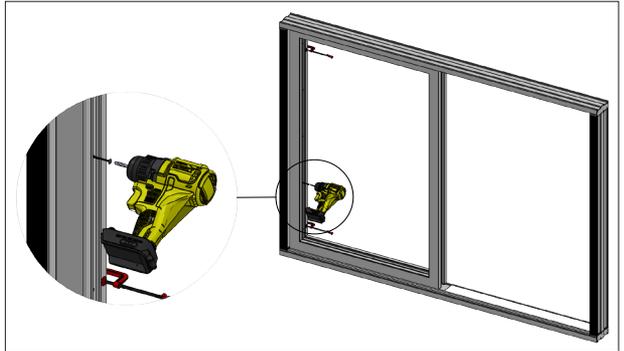

9. Assembly complete

Please see our lift and slide installation instructions for installation detail.

For more information on these quality products
please contact:

EuroLine Windows Inc.
7620 MacDonald Road
Delta, BC, Canada V4G1N2

T. 604.940.8485
F. 604.940.8486
E. service@euroline-windows.com
W. www.euroline-windows.com
Toll Free: 1 800 337.8604

Other publications available from EuroLine Windows Inc. can be
found on our website (www.euroline-windows.com).

Do not reproduce this manual without prior written permission from Euroline Windows Inc.